

Anatomico Clogs 4151-ESD-10



Code	4151-ESD-10
Type	sabots
Category	ESD shoes, Safety shoes
Sizes	35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50
Colors	black
Sole	PU
Outsole	leather
Insole	leather
Certificates	CE EN-20347 ESD EN 61340



Antistatic



Anti-slip sole



CE



Leather upper



Unisex



ESD



Breathable materials



Leather black -10



Available on demand



Leather lining

Description


Highly professional safety footwear with ESD (Electrostatic Discharge) protection. Designated for use in EPA (Electrostatic Area), where only equipment with ESD protection is allowed. Footwear is pursuant to recommendations of standards of protection against electrostatic discharges. Guarantees full protection against ESD is necessary while operating modern electronic devices and in production of electronic devices. Man generates charges of static electricity with their every single move. Friction with conducting material generates an immediate flow of charges. ESD is a synonym for Electro Static Discharge and it relates to the flow (discharges) of static electricity between two bodies during the friction. Static charges have become one of the greatest problems of electronic industry. It is recommended to conform to standard 61340-5-2 in order to ensure the protection against ESD phenomenon. Julex is the manufacturer of the professional safety footwear with ESD for use in EPA (Electrostatic Protected Area). Our products conform to the terms of the harmonised standards: - PN-EN ISO 20 347:2005(U) - PN-EN ISO 61340-5-1 - PN-EN 61340-5-2 Our products had been put to the tests according to the requirements of standards and the results were positive. At customer's request every single pair of footwear can be verified after the production process and an individual test result can be attached. Using safety footwear with ESD is necessary while operating modern electronic devices and in the production of electronic devices.

Sectors

medicine, industry, electronics

Additional information

System uzziemienia Podłoga/obuwie Floor/footwear system for grounding

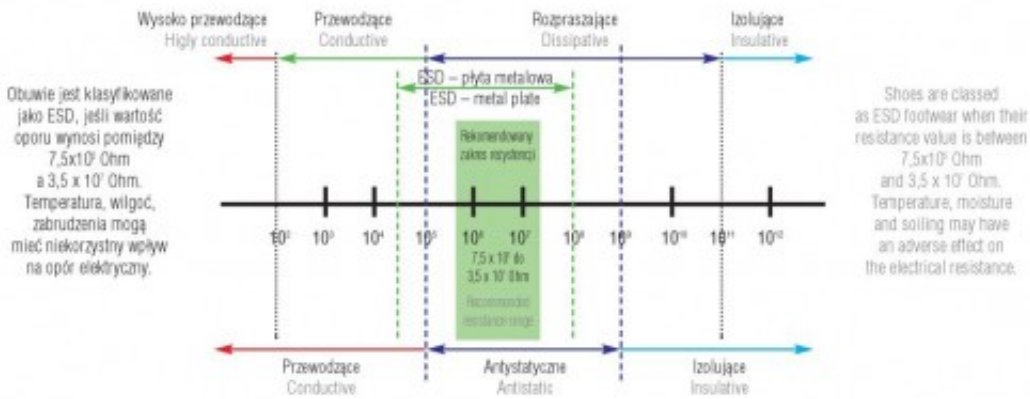

Collection

Based on many years of experience, we have developed, under the JULEX brand, footwear for professionals, persons working in the most severe conditions. We combined qualities such as resistance, protection and comfort, at the same time preserving compliance with the requirements of European standards for professional and protective footwear. Most models may be used in companies which have implemented the **HACCP system**. Our footwear is durable and resistant to external factors, which allowed usage in food industry, meat industry and gastronomy.